

SOLUTION GLOBALE DE PROTECTION AUX ESD

EUROSTAT TURNSTILE


61-200-3103

Eurostat entrance control system helps to ensure every day that operators cannot enter the EPA unless their wrist straps and footwear are compliant. The turnstile provides wrist strap and/or footwear measurement.





SOLUTION GLOBALE DE PROTECTION AUX ESD

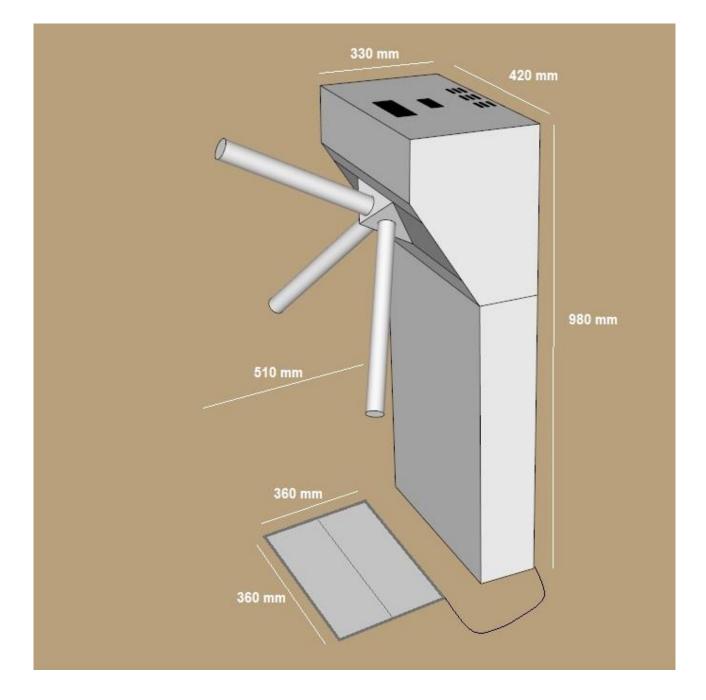


SOLUTION GLOBALE DE PROTECTION AUX ESD



Operation



Step on the footplate for testing the ESD shoes.

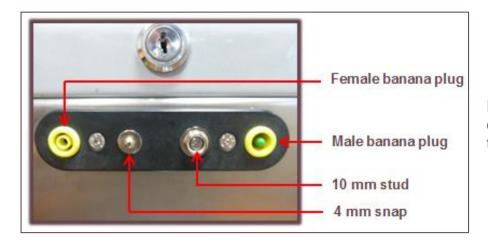

Put the wrist strap and plug it on the front side of the turnstile.



The measurement starts by touching the sensitive electrode on the top of the turnstile. A "bip" sound and two green LEDs indicate the beginning of the test

-EUR@STAT-





When the measurement is finished, three LEDs display show the resistance value of each equipment.

If the test is compliant, the top screen displays a green arrow which indicates that the passage is unlocked and which shows the way to go in.



Push the middle arm with body to rotate the tripod and enter inside the EPA.



DE PROTECTION AUX ESD



To quit the EPA, no test is needed. Push the button on the side of the turnstile, the top screen displays a green arrow which indicates the exit direction.

For safety reasons, emergency stop can be installed on the supply cord of the turnstile. In case of "Power-off" the middle arms fall down.



Product Specifications

Turnstile

| Dimensions: | 42 x 33 x 98 cm (W x D x H) |
|----------------------|---|
| Clear passage width: | 51 cm |
| Weight: | 30 kg |
| Values indications: | Red and green led, different for each kind of equipment |
| Voltage measurement: | Measurement under permanent voltage of 20V +/- 5% |
| Warning: | acoustic signal and green arrow / red no entry logos |
| Material: | stainless steel |
| Material: | stainless steel |

Shoes electrodes

Dimensions: Weight: Features: 36 x 36 cm (L x W) 2.15 kg Electrodes left foot and right foot

Supply

| Power voltage: | |
|-----------------|--|
| Warranty: | |
| Certifications: | |

240 VAC ±10 %, 50 Hz 2 years CE

Calibration

The turnstile tester must be calibrated yearly.

Compliant with

RoHS Directive 2006/95/CE Directive – low voltage 2004/108/CE Directive – electromagnetic compatibility IEC 61340-5-1